

RIMAGE CATALYST® II EDS SERIE



Professional Hardware and Software for Media Ingestion

The Rimage Catalyst® II Evidence Disc System (EDS) is the most powerful and reliable industry solution for forensic media ingestion and the production of CDs, DVDs, and Blu-ray Discs™ for both evidence preservation and data delivery. The Rimage EDS features robust forensic software and a high-resolution camera, allowing it to extract evidence from ingested media and capture an image of the label. This enables the Rimage EDS to automate the time-consuming manual process of importing optical media, such as CD/DVD/Blu-ray, and visually link it to the original source disc. A detailed report, along with options to extract content in various formats needed for import into other forensic tools, makes digital forensics quick and easy. Additionally, the Rimage EDS includes all the functionalities of a standard Rimage system, enabling easy export of evidence onto optical discs or the creation of multiple copies for the secure delivery of immutable data to court officials or for long-term archiving.

Benefits

One device, many functions

The Rimage Catalyst II EDS allows automated ingestion of digital evidence from various sources without extensive manual effort. It can burn data onto discs for preservation, archiving, or as admissible evidence in court.

Maintenance-friendly

Catalyst II systems are designed for reliable production with easy maintenance in any environment, featuring positive airflow, front-accessible air filters, quick-release recorders, forward-facing hard drive bays and separate printers.

Intuitive operation


The Rimage EDS solution makes creating single or multiple copies of evidence as simple as printing on a conventional printer. Case information is indelibly printed directly onto the disc using thermal retransfer technology, ensuring traceability and accountability. Printing takes less than a minute.

Features

- High capacity and throughput
- Full functionality in a compact design
- Integrated Windows 10/Windows 11 ready computer
- Integrated high-resolution digital camera
- Everest® Encore™ thermal re-transfer printing
- LCD interface system status display
- EDS forensic software
- Front USB 3.1 Gen1 port
- Standardized, portable, secure CD/DVD/Blu-ray disc media
- Integration with Rimage software solutions



EDS EINLESEVERFAHREN

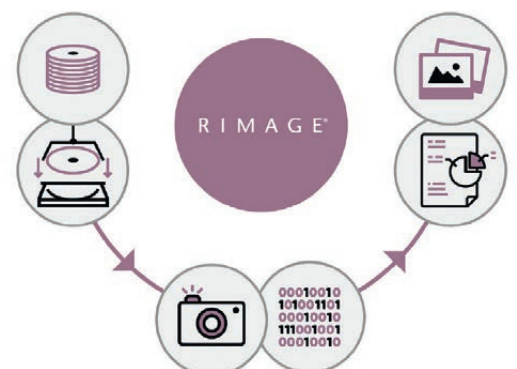

SYSTEM SPECIFICATIONS

CATALYST II EDS SERIE

Number of Recorders	2
Carousel/Total Capacity	3 bins/150 discs
External Output Bin Capacity	50 discs
Printer	Everest Encore
CPU	Intel Core i5 10500E
Trusted Platform Module (TPM)	Included
HDD Storage	System drive: 1 x 250GB NVME; Cache drive: 1 x 1TB SSD
RAM	16 GB
Operating System	Win 10 Enterprise 64-bit/Win 11 READY
Network Adapter	Dual 1-Gigabit Ethernet adapters
Rimage Software Suite (RSS)	A full set of software tools enabling unique artwork design, job submission, system management, production monitoring and custom application creation.
CD Designer™	Label creation software – included
QuickDisc™	Disc burning software – included
Rimage System Manager (RSM)	System Control Software – Included
Rimage Evidence Disc Software	A specialized tool to ingest evidence media, create case reports and export in different formats.
Rimage Copystation Software	Create nearly identical copys of your master discs incl. the original labels using the integrated camera.
Height	25.5 in/64.7 cm
Width	16 in/40.6 cm
Depth*	23.25 in/59 cm
Weight (without printer)	65.3 lb/29.7 kg
Weight w/ Everest Encore	109.3 lb/49.7 kg
Power Specifications	100 - 240 VAC, 60/50 Hz, 3.9 - 2.6 A, 500 W max.
Warranty	12 months
Camera	5MP, Resolution: 2592 x 1944 px

* Allow space (3.5" or 9 cm) in rear of machine for cabling.

We Recommend

Rimage Maintenance Agreements

Maximize your ROI and minimise downtime when quick problem resolution is a must. We will be of assistance in determining the right service option for you.

Rimage Media Kits

Get reliable, uninterrupted performance from your Catalyst II system. With optimised print ribbons and discs, the Rimage Media Kits give you the best-looking, longest-lasting results in one convenient and affordable package.

For more information about the Rimage Catalyst II Series service options and media kits, visit rimage-emea.eu.



Rimage EMEA GmbH
Mainzer Strasse 131
65187 Wiesbaden
Germany
+49 611 927770
sales@rimage.eu
rimage-emea.eu

